



Inside i-Guide®

User Reference Manual



www.waitsfieldcable.com

496-5800

Contents

Welcome to i-Guide	3
Table of Contents	4
Basic Navigation Tips	7
Listings By Time	8
Listings By Channel	8
Navigate Program Listings	8
Quick Menu	9
Quick Menu Icons	9
Main Menu	9
Program Information	10
Action Icons	10
Reminders	11
Setting Reminders	11
Reminder Settings	11
Search	12
Search	12
Title Search	12
Saving Searches	12
Smart Channel Surfing	13
Flip Bar	13
Mini Guide (Browse)	13
Digital Music	14
Local Weather	14
Messages	14
Parental Controls	15
Parental Controls Setup	15
Parental Controls for On Demand	17
View Locked Programs	17
Bypass or Clear Locks	17
Restore Locks	17
Favorites	18
Favorites Lists Setup	18
Access Favorites Lists	19
Add or Delete Channels to Favorites Lists	19
Setup	20
Guide Setup	20
Cable Box Setup	20
Audio Setup	21
Text Language Setup	21
Screen Saver	22
Parental Controls and Purchase PINs Setup	22
Guide Colors	22
Screen Position Setup	22
DVR Setup	22
Closed Captioning Setup	23

Contents

- HDTV** 30
- Digital Video Recorder (DVR)** 31
 - Control Live TV** 31
 - Playback Controls 31
 - Remote Control Arrow Buttons 31
 - Status Bar 31
 - Pause 32
 - Rewind 32
 - Fast Forward 32
 - Slow Motion 32
 - Instant Replay 33
 - Return to Live TV 33
 - SWAP Between Two Programs 33
 - Recording Programs** 33
 - One-touch Recording 33
 - From Program Information 34
 - Manual Recording 34
 - Record Two Programs at Once 34
 - Two Recordings Are in Progress Overlay 35
 - Manage Schedule Conflicts 35
 - Search and Record** 35
 - Actor/Director Search 35
 - Keyword Search 36
 - Saving Searches 36
 - Recording Series** 36

 
Contents

- Modify Series 37
- Modify the Series Priority List 37
- Manage Series Priorities 38
- Manage Series Priority List 38
- View Recorded Programs** 38
- Recorded Program Information Screens 38
- Future Recordings** 39
- View List of Scheduled Recordings 39
- Manage Your Recordings** 39
- DVR Setup 39
- DVR Folders 40
- On Demand Action Icons 40
- Live Program Notice – Default “On” 40
- Manage Series Priorities 40
- DVR Cleanup 41
- DVR History 41
- Modify Recording Options** 41
- From Listings 42
- Recording Notices** 43
- Recording Starting Notice 43
- Changing Channels While Recording 43
- Recording Low and Full Notices 43
- Frequently Asked Questions** 42

Basic Navigation Tips

In i-Guide, **yellow** is the highlight color. To navigate the guide, use the arrows on your remote control. The highlight appears on-screen to indicate your current selection.

Press ◀ ▶ ▲ ▼ buttons on your remote to move the highlight.
Press **OK/Select** to confirm your selection.
Press **EXIT** on your remote to return to watching TV.

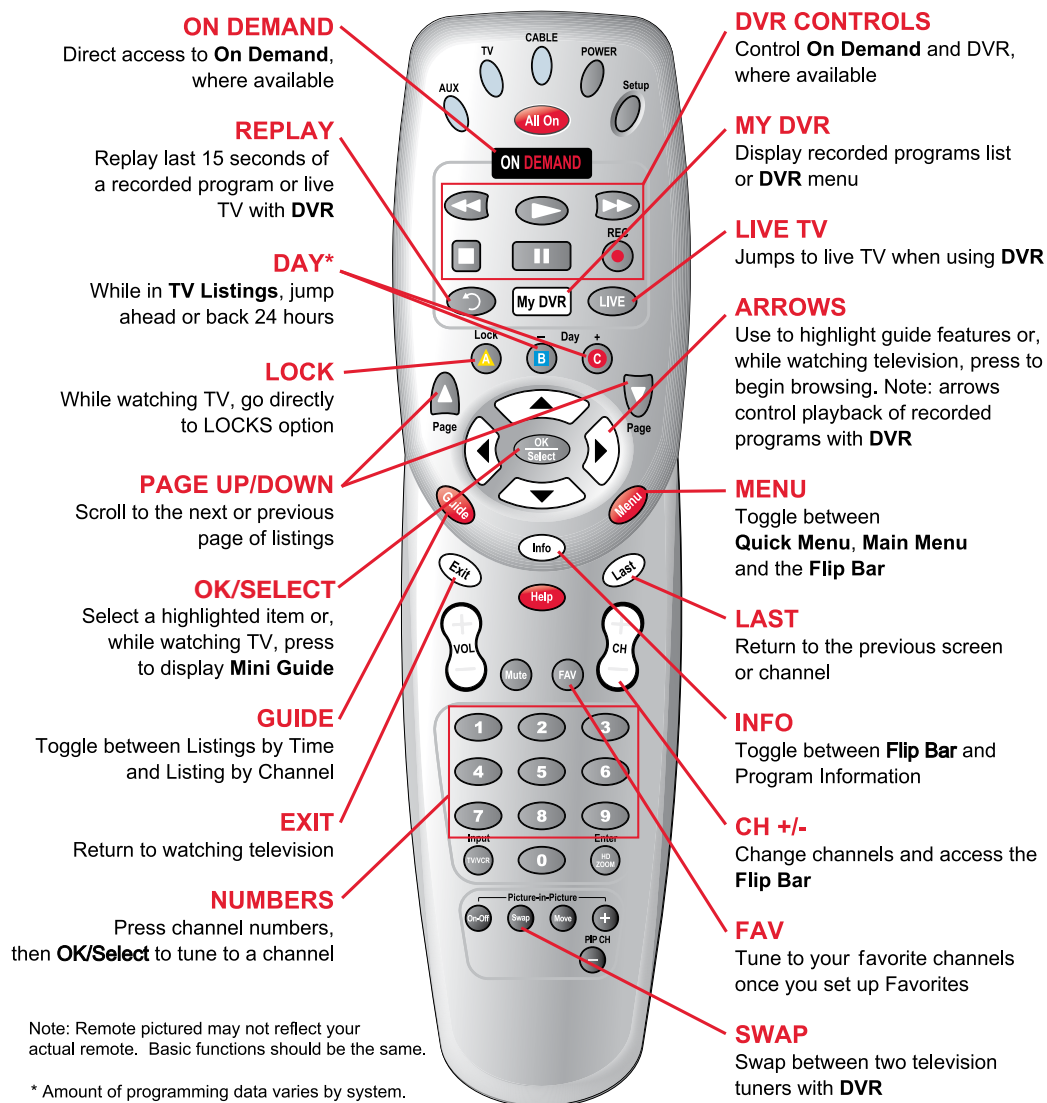

Your Access to Digital Cable

Your remote control holds the key to navigating through the features of i-Guide. Words appearing in **ALL CAPS** refer to a specific button on the remote. Note that all remotes may not have all of the buttons.

Listings By Time

To find out what's on TV right now, press **GUIDE** on your remote to access **Listings By Time**. The listings grid provides a 90-minute view of programming for up to 5 channels per screen. The current program is highlighted in yellow. Use the **▲ ▼** and **◀ ▶** buttons to navigate the listings grid. Instant program info appears in the upper left of the screen. Press **OK/SELECT** to tune to a program from the grid. Press **INFO** for additional information.

Listings By Channel

Press **GUIDE** two times to view **Listings By Channel** and use the **◀ ▶** buttons to see listings for the next channel in the line-up. Use **▲ ▼** buttons to navigate.

Navigate Program Listings

You can use the **▲ ▼** and **◀ ▶** buttons on your remote to quickly navigate the listings screens – up to 14 days in advance. Press **OK/SELECT** to tune to that channel or **INFO** for more information.

Listings are color-coded to identify types of programs.

- Blue** – Regular programs
- Purple** – Movies
- Green** – Sports
- Light Blue** – Kids' programs



For faster searching

- Use the **PAGE ▲ ▼** buttons to view listings a page at a time
- Press and hold **▲ ▼** or **◀ ▶** to rapidly move ahead in time or through the channel lineup
- Press the **DAY + -** buttons to advance ahead a day at a time

Quick Menu

The **Quick Menu*** provides shortcuts directly to the key features of i-Guide and your digital cable service. Press the **MENU** button one time and the **Quick Menu** will appear over any video or guide screen.

Press the ◀ ▶ buttons on the remote to continuously move through the icons.



Guide Symbols to Know: Quick Menu Icons

These icons may appear on your **Quick Menu**. Use the ◀ ▶ buttons on your remote to highlight and select an icon for immediate access.

Main Menu – go to the Main Menu	Search – search programming by category or by Title, Actor/Director or Keyword
DVR – schedule, view and manage recordings	Movies – lists movies by category
On Demand – view On Demand menu and programs	Sports – lists sports events by category
HDTV – view list of HDTV programs, by channel or time	Kids – lists kids' programming by category
Favorites – view your Favorites lists	Parental Controls – lock shows or channels based on preferences

Main Menu

The **Main Menu*** provides access to all of the features of i-Guide and digital cable. Press the **MENU** button twice to view the available options, including:

- **TV Listings By Time**
- **Search**
- **Favorites**
- **Parental Controls** and more



The **Picture in Guide** feature allows you to watch a show while using the guide.**

* Menu selections vary depending on services offered by your cable provider.
** May not be supported by all set-top boxes.

Program Information

Instant Information is available when you highlight a program in the program listings, which includes program title, start and end time, a brief program description and indicators to identify settings such as **Reminders** and **Recordings**.



To access information while viewing listings or watching TV, press the **INFO** button. Press **INFO** a second time to see a longer description and additional details such as actor, rating, release year, category and run time.

Action Icons

From the program information screen use the Action Icons to set a **Reminder** or **Recording**, or designate a **Favorite** among other options. Use ◀ ▶ ▲ ▼ buttons to highlight each icon and see the on-screen description.

Guide Symbols to Know: Action Icons


	Go back to the previous screen		Watch this channel or program
	Record/Change Recording Options* (DVR)		Save the channel in your Favorites list
	Set or cancel a Reminder for this program		Place a lock on the program to restrict viewing
	See all the times the program will be airing		Order PPV, On Demand and other pay services

* Menu selections vary depending on services offered by your cable provider.

Reminders

You can set **Reminders** so you don't miss shows you want to watch.

Setting Reminders

From the **Program Info** screen, highlight the  icon and press **OK/Select**. Follow the on-screen prompts to confirm the **Reminder** or **Reminder Settings**.

 


Reminder Settings

Customize the frequency and timings for **Reminders**.

- Use the ◀ ▶ buttons to set repeating **Reminders**
- Determine Start and End time for the **Reminder** to appear on-screen – up to 15 minutes prior to the program starting and up to two hours after the program is over


When you set a **Reminder**, you have the option of bypassing **Locks*** if they are placed on the program, so you can tune directly to the program without having to enter your **Locks PIN**. (See Parental Controls section for more information.)

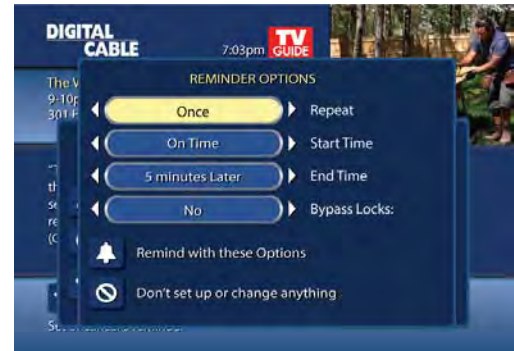

* This option appears only if you have already set a **Lock** for that program.

Search

Search





i-Guide provides you with many ways to find your favorite shows. Select  from the **Quick Menu** or **Search** from the **Main Menu** to begin. Quickly search programs by **Title**, or search by category like **Movies**, **Sports** or **Kids** programs or view **HD** and **PPV** channels.

If you have a DVR, you can quickly search by **Keyword** or **Actor/Director**. See Search and Record in the DVR section for more information.



Title Search

Title Search allows you to find a specific program by entering the first few letters of the program name.

Select **Title** from the **Search** menu and use the     buttons to navigate the keyboard and spell out the program title. Continue entering letters until the show you are looking for appears on the right. If the program is not airing in the next 14 days, it won't appear on the list.



Saving Searches

Save your search by selecting **Save Search**. Saving searches can be helpful when you want to quickly find a program. Simply select **Saved Searches** from the **Search Menu** to access your list of saved searches to restart or delete the search. You can save up to 16 searches at one time.



Smart Channel Surfing

Flip Bar

When you change channels, the **Flip Bar** appears and provides a brief two line description about the program and other information including title, start and end time, channel, current time, program rating and settings such as **Favorites** or **Locks**.

When you find the program you are interested in, press **INFO** for more program details, or press **OK/Select** to make the **Flip Bar** disappear.

The **Flip Bar** may also show other options:

Watch in HD* – When tuning to a standard definition channel, this button may appear on the left side of the Flip Bar to indicate the channel is also available in high-definition. Press **OK/Select** to tune directly to the associated HD channel.

On Demand* – Some channels may have programming available On Demand. If so, the On Demand button may appear on the left side of the **Flip Bar**. Highlight the **On Demand** button to access On Demand programming for that network.



Mini Guide (Browse)

The **Mini Guide** allows you to watch television and view program listings without leaving the program you are watching or going to the full-screen guide.

To access **Mini Guide**, press **OK/Select**. **Mini Guide** appears on the lower 1/3 of the screen and displays two or three channels and 90 minutes of listings at a time. Use the **▲ ▼** arrows to see listings on other channels and the **◀ ▶** arrows to see listings at other times. At any time, press **INFO** or **OK/Select** to access program info.

The default setting for **Mini Guide** is a 2-channel display. To change the display, go to **Main Menu**, select **Setup**, then **Guide Setup** and change **“Mini Guide Cell Height.”**



* Requires HD service from your cable provider. On Demand not available in all areas.

Digital Music*

Digital Music is continuous, commercial-free music in a variety of formats.

- Select **Digital Music** from the **Main Menu** or **Search Menu**
- Press the **MUSIC** button on the remote (if available)

You can press **INFO** for more information on each category. Select a music format and enjoy the music.



Local Weather**

 
Get accurate, up-to-date local weather conditions and a 3-day forecast.

From the **Main Menu**, highlight **Local Weather** and press **OK/Select**. Use the down arrow button to see a detailed local weather forecast.



Messages

Messages may be sent occasionally by your cable company to announce new services, special promotions or other information. If you have a **Message**, an envelope indicator will appear in the upper left corner on guide screens and a red light will appear on your set-top box. From the **Main Menu**, select **Messages**, highlight the desired **Message** and press **OK/Select** to read.

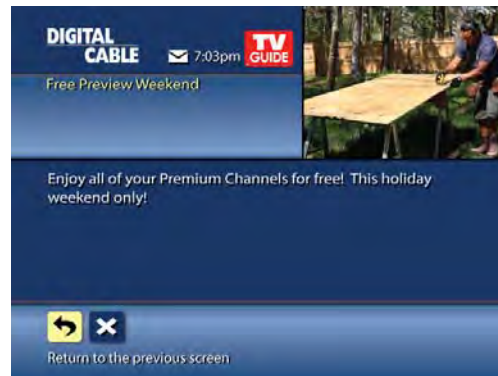



* Digital Music may not be available on all menu configurations.
** Local Weather service not available for all locations.

Parental Controls

i-Guide provides a **Parental Controls** feature, which allows you to restrict viewing and purchases of TV programs and services based on your viewing preferences. To activate **Parental Controls**, set a personalized 4-digit PIN to place **Locks** by movie ratings, TV and content ratings, channels or titles. You can also hide adult titles from being displayed on-screen.

Parental Controls Setup

Locks can be set quickly in a variety of ways anytime while watching TV or using the guide:

- Press the **Lock** button on your remote*
- Select the  from the **Quick Menu**
- Select the  from any program info screen to lock a specific program
- Access **Parental Controls** from the **Main Menu** or **Setup Menu** to set up all **Locks**



Quick Menu

 


Program Info




Main Menu

With any of these actions, if you have not set up a **PIN**, you will be prompted to enter a 4-digit **PIN** to activate the **Locks** feature. If you have already set up a **PIN**, enter your number. (See Setup Section for more information on how to set up your **PIN**.)

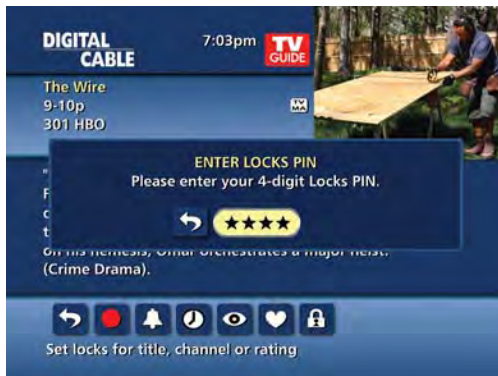

PIN Setup

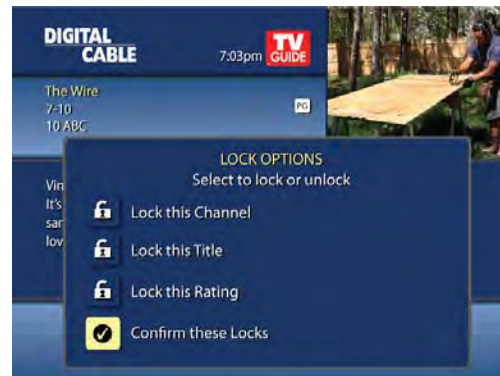 

Lock Options

* Not supported on all remotes.

The **Parental Controls** feature also provides you the opportunity to lock programs and movies by ratings and content.

 
From the **Parental Controls** Button on the **Main Menu** filter your locks by **Movie Rating**, **TV Rating**, **TV Content**, **Channel**, **Title**, or **Service**.



Under **TV Content**, you can lock the level of explicit content based on your viewing preferences for **Violence**, **Language**, **Sexual Situations**, and **Suggestive Dialogue**.




Select **Movie Ratings** or **TV Ratings** to block content by rating. The guide will automatically lock that rating and the more restrictive ratings. For example, when you lock PG-13, movies with R, NC-17 and Adult ratings will also be locked.

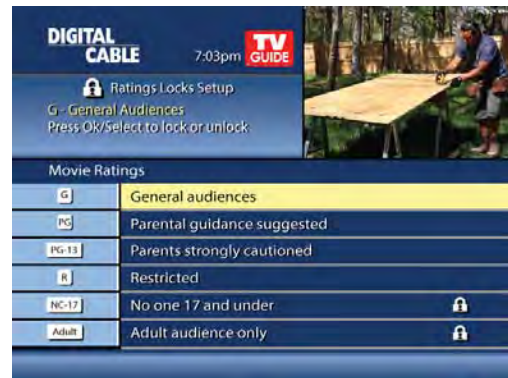

MOVIE RATINGS	TV RATINGS	TV CONTENT RATINGS			
		Violence (FV, V)	Language (L)	Sexual Situations (S)	Suggestive Dialogue (D)
G	TV-Y				
PG	TV-Y7	Fantasy Violence			
PG-13	G				
R	TV-PG	Moderate Violence	Infrequent Coarse	Some Sexual Situations	Some Suggestive Dialogue
NC-17	TV-14	Intense Violence	Strong Coarse	Intense Sexual Situations	Intensely Suggestive Dialogue
Adult	TV-MA	Graphic Violence	Crude Indecent	Explicit Sexual Activity	

Parental Controls for On Demand

 Parental Control settings include **On Demand** programming. To block all access to **On Demand**, select **Service Locks** from the **Parental Controls Menu**.

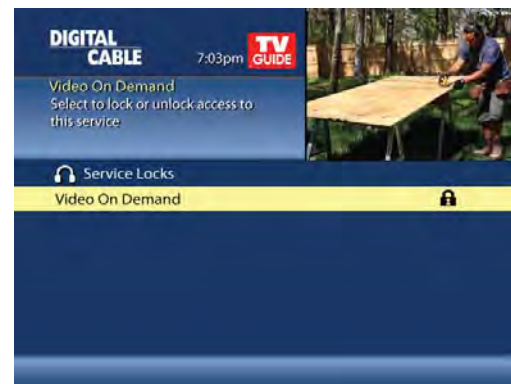


View Locked Programs

To view programs and channels you have locked, enter your **PIN** when prompted. **Locks** will automatically be restored when you tune away from the channel or turn your set-top box off.



Bypass or Clear Locks

 Temporarily open or clear all **Locks** for easier viewing. Under **Setup** from the **Main Menu**, select **Parental Controls Setup**, then **Master Locks**, and change the options from **No** to **Yes**.

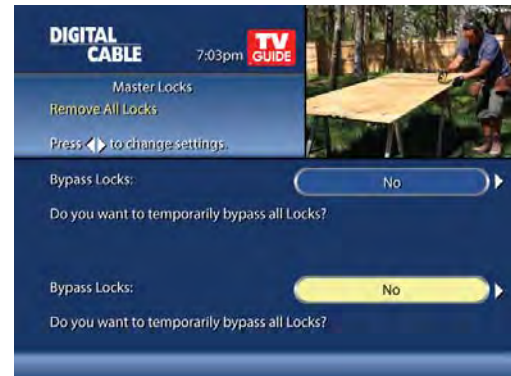


Restore Locks

Locks may be restored in any of the following ways:

- While watching TV, press the **LOCK** button anytime and enter your **PIN**
- Select **Parental Controls Setup** from the **Setup Menu**, then under **Master Locks** change the options from **Yes** to **No** to turn **Locks** back on
- Turn the set-top box off and back on

Favorites

 The **Favorites** feature allows you to quickly access channels you and your family have designated as **Favorites**.

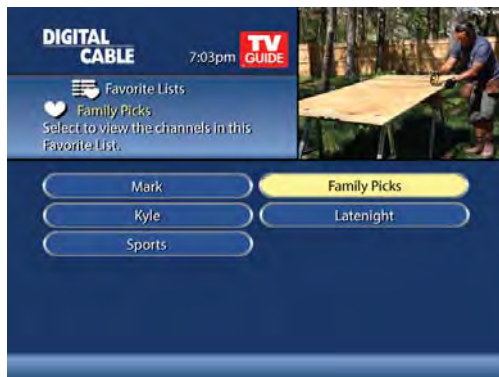


Favorites Lists Setup

Create and manage up to five (5) **Favorites Lists**. From the **Main Menu**, select **Setup**, then **Favorites Lists Setup**. Use your on-screen keyboard to name your lists.







Access Favorites Lists

- While watching TV, press the **FAV** button to skip to your next Favorite channel on the current list
- From **TV Listings** or **Mini Guide**, press the **FAV** button to bring up a filtered guide of the channels in your last accessed list. Press **FAV** button again to scroll through all of your **Favorites Lists** – the guide will have a tab with each list's name
- From the **Quick Menu** select the  to bring up your **Favorites Lists**. If you have not yet set up any **Favorites**, simply follow the on-screen prompts to begin a new list



Add or Delete Channels to Favorites Lists

- From the **Quick Menu** – select the  Icon
- Select the Favorites List you want to edit
- Select the  Icon to add or remove favorite channels
- You can also rename, delete, or **Lock** your **Favorites** list
- Highlight a channel in the listings and press **OK/Select** or **FAV** to add to your favorites – a  Icon will appear; Or, to remove the channel, press **OK/Select** or **FAV** and they will be removed
- Press the  Icon to confirm your **Favorites** channel settings



Setup

From the **Setup Menu**, you can activate and customize certain **i-Guide** features such as the **Flip Bar**, **Parental Control** options, **Cable Box** settings, **Audio** settings, **Languages** and more.

Guide Setup

- **Flip Bar Position** – **Flip Bar** can appear on top or bottom of screen – default is Bottom
- **Flip Bar Timeout** – **Flip Bar** will stay on your screen, from 2 to 15 seconds – default is 3 seconds
- **Channel Entry:**
 - Yes – automatically tunes to a channel after 2 seconds when entering channel number from your remote – default is Yes
 - No – you must enter 3 digits or press **OK/Select** when entering channel number from your remote
- **Reminder Time** – Adjust the amount of time the Reminder Notice will appear before the start of a program, from 1–15 minutes – default is one minute
- **Grid Cell Height** – Adjust the listings grid for single- or double-height grid display
- **Mini Guide Cell Height** – Adjust the listings display for single (3 channels) or double (2 channels)
- **Message Indicator** – Select On to make the message envelope appear when a new message is received



Cable Box Setup

- **Front LED Display**
 - Current Channel – displays the currently tuned channel on the front of the cable box
 - Current Time – displays the current time on the front of the cable box
- **AC Outlet**
 - Switched – Determines that power is available only when the cable box is on
 - Unswitched – Allows the power to remain constant to the outlet on the back of the cable box
- **Configuration** – Highlight and press **OK/Select** to show the configuration screen, which includes information your cable company may need in the event of a problem with your service.



Audio Setup

Default Audio Track

Secondary digital audio can be changed on certain networks and programs. Note that the default audio track will be set to Channel Default, or primary audio, which in most cases is English. You can change the default language to English, Spanish, French, or Portuguese.

Descriptive Video Services (DVS)*

Descriptive Video Service (DVS) is an alternative audio channel which makes television more accessible to the visually impaired by providing narrated descriptions of key visual elements within a program, such as actions, subtitles, scene changes, graphics, and body language. Default setting is Off.

Audio Output – Choose if the audio output goes to your TV or to your stereo.

- **TV Speaker** – default setting
- Select **Advanced** to change the settings for Compression and Stereo Output

Optimal Stereo

- **No** – Volume is unchanged from the current setting
- **Yes** – Volume is automatically adjusted to the optimal level



Text Language Setup

Access the **Text Language Setup** from the **Setup Menu** to independently select language setting for the menu text. The default setting is English in most cases. Change the default language to English, Spanish, Canadian English or Canadian French.

From the **Setup Menu**, select **Text Language Setup**. Choose the preferred language for the on-screen menus within **i-Guide**. Select **Yes** to confirm.

Note: changing the language can take several minutes. During this time, listings are not accessible.



* For Canadian cable providers only.

Screen Saver

A **Screen Saver** can be activated on your TV screen. Once the **Screen Saver** is set to On it will automatically engage if a guide screen is displayed for longer than the set activation time. The default is set to On.

 
- From the **Setup Menu** select **Screen Saver** to change the settings
- The activation time is between 1-15 minutes



Parental Controls and Purchase PINs Setup

Your **Parental Controls PIN** allows you to restrict viewing of programs. Your **Purchase PIN** is used to restrict pay programming purchases. Once you have setup your PINs, you can return to **Parental Controls Setup** to set up your program **Locks** as reviewed in the **Parental Controls** section.

Use the <left> <right> <up> <down> buttons to make your selections, and then press **OK/Select** to confirm each setting.

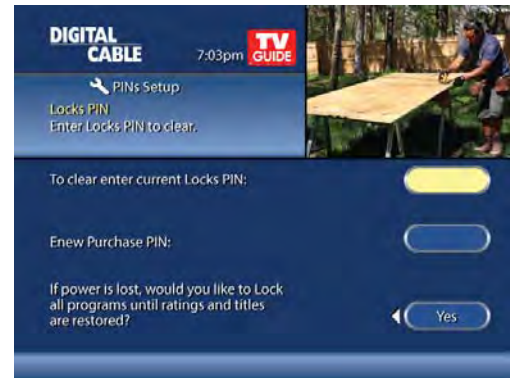

Guide Colors (if available)

Select to change the color scheme of i-Guide.

Screen Position Setup

To alter your screen position:

 
- From the **Setup Menu**, select **Screen Position Setup** to adjust the screen position
- Use the <left> <right> <up> <down> buttons on your remote until the display arrows are centered on the screen

DVR Setup

Select **DVR Setup** to manage:

- DVR Folders
- Live Program Extension
- DVR Clippings

The default setting is On for these options. See the DVR section for complete information about these settings.

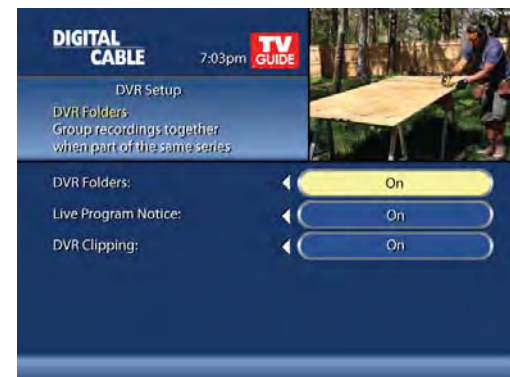

Closed Captioning Setup

Closed Captioning controls are supported within the guide on advanced set-top boxes to ease access to closed captioning controls. The default setting for the closed captioning feature is OFF with background set to ON.

How to Access and Turn On/Off Closed Captioning

From the **Setup Menu**, select **Closed Captioning Setup** to manage closed captioning.

In **Closed Captioning Setup**, users can turn closed captioning on or off, and select the background display format.

- To activate closed captioning, set Closed Captioning to On. Select Off to deactivate closed captioning. The default setting is Off.
- To change the background display setting, set Background to either On or Off. The default setting is On.

Note: closed captioning is not available for all programs.



Example: Closed captioning turned on with background set to "On"



 
Example: Closed captioning turned on with background set to "Off"

HDTV

If you have a high-definition television (HDTV) and subscribe to HD service through your cable provider, then you have the opportunity to enjoy your favorite shows, sports and events in a wide-screen, high-resolution format.

To quickly access HD programming:

- From **Quick Menu** select **HD** to view shows by Time or Channel or to view a list of all HD channels
- Select HDTV from the **Main Menu**
- From the **Flip Bar**, when tuned to a standard definition channel and there is an HD channel equivalent, a “Watch in HD” button will appear on the **Flip Bar**. Simply press **OK/Select** to tune directly to the associated HD channel

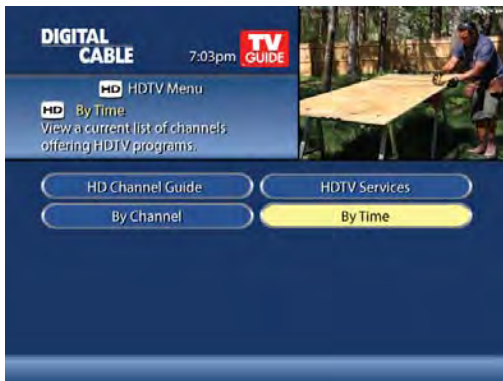

If you don't subscribe to HD service and you tune to an HD channel, you will be notified that the channel is not available. Contact your cable provider for information on HD service.*

* You must have HD equipment to view HD programming.

Digital Video Recorder (DVR)

Pause live television! Rewind and replay programs so you don't miss a beat.

Imagine ... coming home to your own personal library of television programs, movies and sports that you can watch whenever it's convenient for you. It's TV on your schedule. Record up to 90 hours of your favorite programs and view them as many times as you want, whenever you want.

Control Live TV

 
With a **Digital Video Recorder (DVR)** from your cable provider, you have the opportunity to control live TV. When you tune to a channel, the DVR automatically begins making a temporary recording of the program. Once the temporary recording begins, you can **Pause**, **Rewind** and **Fast Forward** through the recording. Your DVR will record up to two hours of Live TV.*

The live TV recording is not permanent, unless you save it to the DVR's hard drive. For live TV recordings, the temporary recording will be erased if you:

- Turn off the DVR
- Change channels
- Watch more than 2 hours of the same channel – after 2 hours the DVR will buffer only the most recent 2 hours


Playback Controls

You can play back your video recordings using the **Video Control Buttons**.

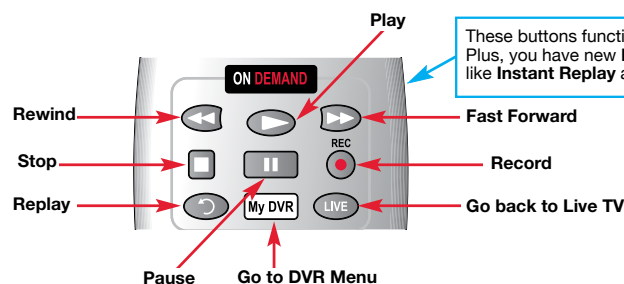

Remote Control Arrow Buttons

 The ◀ ▶ ▲ ▼ buttons on your remote control will control playback when you are watching a recording in progress or while watching a recorded program.

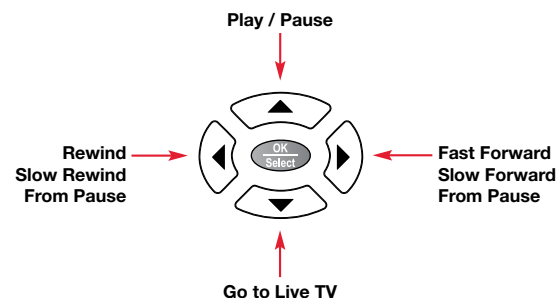

Status Bar

The **Status Bar** appears whenever you **Pause**, **Rewind** or **Fast Forward** a live program. The Status Bar shows title, channel and duration of time. Green indicates the length of program in the buffer. Red indicates you are watching a DVR recording in progress. White indicates the length of multiple programs that have been recorded in the buffer.**

* Recording capacity varies.

** Recording buffer (temporary storage) for each tuner will record as long as you stay tuned to the same channel.

Pause

You can Pause live TV anytime by pressing **⏸** on your remote. For programs you're watching live, your DVR will remain in pause for up to 90 minutes.* Pressing **Pause** **⏸** more than once allows frame by frame viewing. Press **Play** **▶** to resume the program.



Rewind

Press **Rewind** **⏮** to rewind. Press it up to 4 times to increase Rewind speed. On the 5th press, the program resumes normal play.



Fast Forward

For live TV, **Fast Forward** can be activated if you have pressed Pause or Rewind. Press the **⏭** to move forward. Press it up to 4 times to increase FF speed. On the 5th press, the program resumes normal play. You can only Fast Forward up to the point of live broadcast.



Slow Motion



Use Slow Motion to access “slow-forward” and “slow-rewind” – perfect when watching sporting events.

To activate, press **Pause** **⏸**, then **Fast Forward** **⏭** or **Pause** **⏸** then **Rewind** **⏮**. Press **Play** **▶** to resume regular program speed.





* Pause capacity depends on video format; less than two hours for HD programming.

Instant Replay

With **Instant Replay**,* you can replay the last 15 seconds of a program. Press **Replay**  or **Page**  on the remote. Press repeatedly to continue skipping back in 15-second increments.

Return to Live TV

When you pause or rewind a live program, the program continues to broadcast in real time. To return to live show, press the **Live*** button  or  on your remote.


SWAP Between Two Programs

If your **DVR** has two tuners, it can buffer (temporarily record) two programs at the same time – one on each tuner. The **SWAP** feature allows you toggle back and forth between two live shows while giving you control of both. If you change channels any other way than using the **SWAP** button, you will lose the buffer recording.


1. While tuned to a program, press **SWAP** on your remote to change tuners.
2. Select a second program by changing channels or using the guide.
3. Press **SWAP** again to toggle between the two programs.
4. When recording two programs at the same time, on-screen prompts will ask if you wish to swap tuners. Select your desired recording preference.

Recording Programs

i-Guide makes it easy to schedule recordings on your DVR and build your own personal library. You can record programs in several ways:

- One-touch right from the  on your remote
- From any **Program Info** screen
- Set a manual recording


One-touch Recording

Press the **RECORD**  on your remote any time while you're watching a program to begin recording. From the Listings grid, just highlight the show you want to record and press the record button on your remote.



* Not all remotes have Replay and Live buttons.


From Program Information

From any **Program Information** screen, highlight the  button and press **OK/Select** to schedule a recording. Follow the on-screen prompts for additional recording options.



Manual Recording

You can set a Manual Recording for a specific time or channel:

- Select **DVR** from the **Quick Menu** or **Main Menu**, or **My DVR** button on your remote
- Select Set a Recording
- Select start and end times and day, then press Confirm
- Select channel to record from channel list
- Select Record to confirm settings or select Recording Options  for additional options



Record Two Programs at Once

A Dual Tuner DVR allows you to set recordings for two different programs that air at the same time. While recording two programs, you can watch and control either program up to the point of live TV by using the **SWAP** button on your remote.

While Watching a Show Currently Airing

- Press **RECORD** to record the program you are watching
- Press **SWAP** to switch to the other tuner and find the second program you want to record
- Press **RECORD** when you locate the second program you want to record

From the Guide

- Highlight a program you want to record from any listings screen
- Press **RECORD** to set up the first recording
- Highlight the second program
- Press **RECORD** to set up the second recording



Two Recordings Are in Progress Overlay

 
When two programs are recording simultaneously and you change channels, an overlay will appear. Follow the on-screen prompts:

- Swap to view your other recording
- Continue recording, don't change channel
- Stop recording change channel (this appears when 2 recordings in progress and want to tune to another channel)



Manage Schedule Conflicts

If you schedule more than two recordings for the same time, you will see a **Scheduling Conflict** screen that allows you to choose between a previously set recording and the new recording that is conflicting. Individual recordings always take priority over series recordings when there are scheduling conflicts. In case of a scheduling conflict between two series programs, additional icons will appear at the bottom of the **Scheduling Conflict** screen to help you determine which program to record.

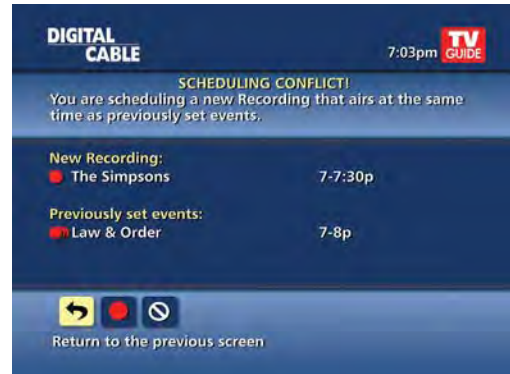


Search and Record

Expanded search and record capabilities make it easy to find your favorite shows, celebrities or even subject on TV and schedule auto-recordings based on your search criteria.

Actor/Director Search

 Actor/Director Search allows you to find your favorite celebrities appearing on TV.

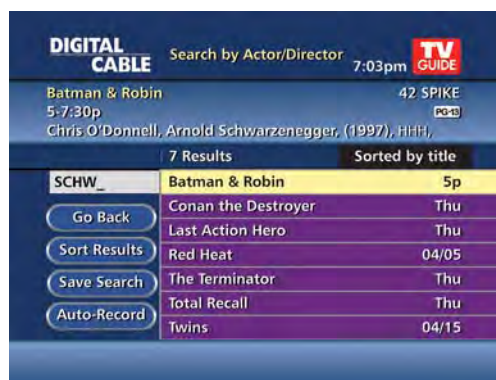

Select **Actor/Director** from the **Search Menu** and use the ◀ ▶ ▲ ▼ buttons to navigate the keyboard to spell out the celebrity name – up to 25 characters. The list of available actors will begin to populate as soon you begin to enter letters and the list will narrow as additional characters are entered.

Once you see the celebrity you want, arrow right and press **OK/Select** to view programs that meet your search criteria. The list can be sorted by date or alphabetically by selecting the **Sort Results** button on the left side of the screen. If you don't see your celebrity on the list, that means that there is no upcoming programming available. Save this search for quick access later.

Keyword Search

Select **Keyword** from the **Search Menu** and use the ▲ ▼ buttons to navigate the keyboard to spell out your keyword. Select **Search Now** to begin the search and the list of matching results will appear. The Keyword Search is based on any word in the program title or description. The list can be sorted by date or alphabetically by selecting **Sort Results**. Save the search criteria or set up an auto-recording.



Saving Searches

Save your search by selecting **Save Search** on any results screen. Saving searches can be helpful when you want to quickly find a program, subject or celebrity. Simply select **Saved Searches** from the **Search Menu** to access your list of saved searches to restart or delete the search. You can save up to 16 searches at one time.




From any Search Results screen you can:

- **Sort Results** – sort results by title or date
- **Save Search** – save your search for future reference (save up to 16 searches)
- **Auto-Record** – set a DVR auto-recording of your search results



Recording Series

Your **DVR** allows you to record multiple episodes of a program (series) according to your preferences. To set up a **Series Recording**, begin by selecting the program from the Listings grid or from a Search results list:

- Select Record from the **Program Info** screen
- Select Set Up a Series Recording
- Select the type of episode to record, such as First run only episodes
- Specify how many recordings to save
- Specify how long to save the recording
- To access advanced series set up features, like adding minutes to the start and end times and specifying which channels to record, select the **Recording Options**  to review all options



Your **Series Recordings** will appear in the **My Recordings** list with the show title as its label. Multiple recordings of the same show will have the same label and will be listed beginning with the most recent recordings first as default. To change your view use the ◀ ▶ buttons on your remote to View By Date, View By Channel, or View By Title. You may also modify the priority assigned to a series using the **Series Priority List**.



Modify Series

From the **DVR Menu** select **Series Recordings** for a list of scheduled **Series** or keyword **Series**. From here, you can change the priority of your series or modify **Series** recording. To modify:

- Use the ▲ ▼ arrows to highlight the series, press **OK/Select** to view a summary of recording settings for that series, including the number of episodes scheduled to record in the next 14 days
- Highlight the ⚙️ to modify settings. Select the ⚙️ again to view and modify all settings
- Highlight the 🔴 to confirm



Modify the Series Priority List

If there are scheduling conflicts in your series recordings, your DVR automatically creates a **Series Priority List**. The first series you set to record has the highest priority and will be the one recorded if there is a conflict. You can easily change the recording priority of the series so that the series of your choice are recorded when a conflict exists.

- Select DVR from the **Quick Menu** or **Main Menu**
- Choose **Series Recordings**
- Highlight a program and use the **Page Arrows** to modify priority








*Note: if you want to record two series recordings instead of an individual recording that airs at the same time, you must delete the individual recording from the **Scheduled Recordings List**. (See View List of Scheduled Recordings section to cancel a recording.)*

Manage Series Priorities

- To give your new recording the highest scheduling priority and to capture the most number of episodes for your new recording, select **High**. The screen will show you how many episodes of the new series will be recorded and which episodes of the old series will not be recorded because of the conflict
- To move the new series back to the bottom of the scheduling priority list, select **Low** and the screen will refresh and give you revised results
- Select the **Record Icon**  to confirm your new settings






 
Guide Symbols to Know: Manage Series Priority List

	Return to previous screen		Show conflicts when the new series is a low priority
	Record new program or series as shown		Don't record new program or series
	Show conflicts when the new series is a high priority		

View Recorded Programs

From the DVR menu, select **My Recordings** to view your programs:







- Press **My DVR** on the remote (if available)
- Select **DVR** from the **Quick Menu**
- Select **DVR** from the **Main Menu**

Use the   arrows on your remote to sort recordings by Title, Date or Channel. Use the   arrows to scroll through the list and press **OK/Select** or **INFO** for program description and use the Action Icons to begin playback.

You can control playback of a recording by using the video control buttons or arrow buttons on your remote to fast-forward, rewind and pause your program.



Guide Symbols to Know: Recorded Program Information Screens

	Go back to the previous screen		Delete the program from My Recordings
	Play the recording		Change the Delete Priority
	Start the recording from the beginning		Place a Lock on the program to restrict viewing

Future Recordings

View List of Scheduled Recordings

From the **Main Menu** or **Quick Menu**:

- Select **DVR***
- Select **Future Recordings**
- See a list by day of all the programs you have scheduled to record; use ◀ ▶ arrows to advance by day
- Select a title to cancel the **Scheduled Recording** or modify **Recording Options**



Manage Your Recordings

 
A recorded program remains in your **My Recordings** list until you decide to delete it or have set it to delete when space is needed. Your **DVR** will record and store up to 90 hours of standard definition programming and up to 20 hours of high-definition programming.** There are several options you can choose to make the most efficient use of your storage space:

i-Guide gives you easy ways to manage your recordings and there are several options you can choose to make the most efficient use of your storage space:

DVR Setup

From the **Quick Menu** or **Main Menu**, select **DVR** to access **DVR Setup** to manage:

- DVR Folders
- Live Program Notice
- DVR Clipping

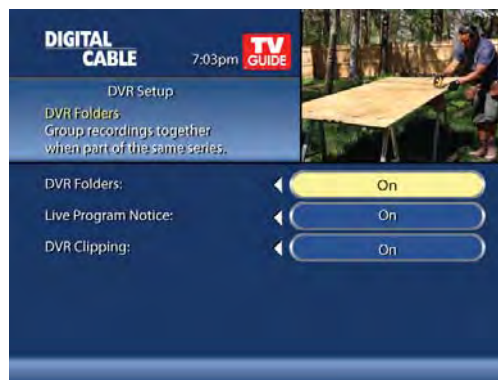

* Menu label may vary.

** Recording HD programming requires a DVR connection to an HD television.

DVR Folders

DVR Folders help you keep recorded series organized and help you scroll through your recordings quickly. **DVR Folders** automatically group like titles into folders. Highlight the **DVR Folders** to open and scroll down to select a specific episode to watch. Press **LAST** to return to your recordings list.



Live Program Notice – Default “On”

The notice overlay will appear when a DVR recording is scheduled for a live program, such as sports or awards shows. You can choose to extend the recording time of live programs in the event the program runs longer than scheduled.



DVR Clipping

i-Guide provides a feature to accommodate recording two overlapping programs. With **DVR Clipping**, **i-Guide** will automatically clip the beginning of a program if there is a recording overlap when both tuners are in use. For example, while watching live TV, a scheduled recorded program ends at 9:05, but your second recorded program is scheduled to begin at 9:00; the second program will be “clipped” so that your first program is recorded in full. Clipping happens when both tuners are in use during the recording time. If this occurs, a “clipped” notice will appear next to those programs in the **My Recordings** listings.



Manage Series Priorities

From the **DVR Menu** select **Series Recordings** to view a list of Series and Keyword Series. Use the up/down arrows ▲ ▼ on your remote to highlight a series. If you want to change priority of a series, use the page up/down keys on your remote to move the series up or down your list. **Select Confirm** to confirm and accept your changes. The first series set to record has the highest priority and will be the one recorded if there is a conflict.



DVR Cleanup

 
From the **Main Menu**, select **DVR Menu** to access **DVR Cleanup**.

DVR Cleanup allows you to delete multiple recordings with a simple check box. When you select **DVR Cleanup**, a **DVR Cleanup** screen appears, with a list of all of your recordings. To check what recordings to delete, simply highlight the corresponding box(es), then arrow left to highlight the **Delete** button and press **OK/Select**, and confirm your deletion.



DVR History

DVR History provides you with a list of recent DVR deletions or missed recordings. If a program did not record, DVR History will provide a reason why the program didn't record or when a program was deleted.

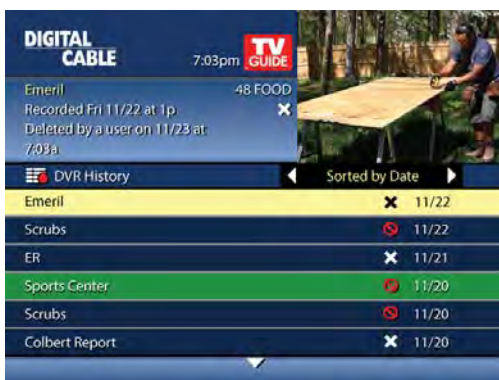




Modify Recording Options




 
i-Guide gives you flexibility to manage your personal video library. You can modify your **Recording Options** at any time, as often as you like.

From the **Quick Menu** or **Main Menu** (or from **MY DVR** on the remote), select **DVR**, then select **Future Recordings** to see a list. Highlight a program title and press **OK/Select** or **INFO**.



You can also select **Series Recordings** to see a list of just scheduled series.

Select  from the Program Information Screen. Select  to change the Recording Options or select  to delete this program from your list of Future Recordings.


Use the     buttons on your remote to change the **Recording Options**:



- Change the frequency of the recording, such as every day or once a week
- Specify how many recordings to save
- Set a Save Until parameter, either until you delete or delete automatically when space is needed
- Change the start and end times in order to catch every minute of a program, even if it runs over



From Listings

Select your **Scheduled Recording** in the listings; it will be indicated by the red dot in the **Instant Info**.

Press **OK/Select** or **INFO** and select  to change your options or delete the Scheduled Recording.

From here, select  to cancel the recording, or select  to see all the Recording Options.



Recording Notices




Recording Starting Notice

If you are currently watching TV, before a Scheduled Recording begins, a notice will appear giving you the opportunity to confirm or cancel the recording. If you don't do anything, the DVR will automatically tune to the channel and begin recording. Live TV programming that was temporarily recorded in the buffer will be erased.



Changing Channels While Recording

If two recordings are in progress* and you attempt to change channels, a notice will appear (Two Recordings in Progress screen).

- Select the  to view the other recording
- Select the  to continue recording as scheduled
- Select  to cancel the current recording and change the channel



Recording Low and Full Notices

i-Guide will advise you with an on-screen notice when available memory on the DVR is low or full. If recording space becomes full during a recording, the recording will stop. When you schedule a recording and recording space is low, a notice will prompt you to review your DVR Recordings to delete recordings.



* Dual-turner DVRs only