


Connecting your DCX700 High-Definition Set-top Box



Each set-top box has several configuration options. In addition to your cable set-top box, you will also need the following:

- **Coaxial Cable** - to connect to the cable set-top box from your cable wall outlet.
- **HDMI or Component Cables** - for the best possible audio and video quality as well as ease of installation, we recommend using an HDMI cable.
- **Power Adapter** and **Remote Control** - for your cable set-top box.

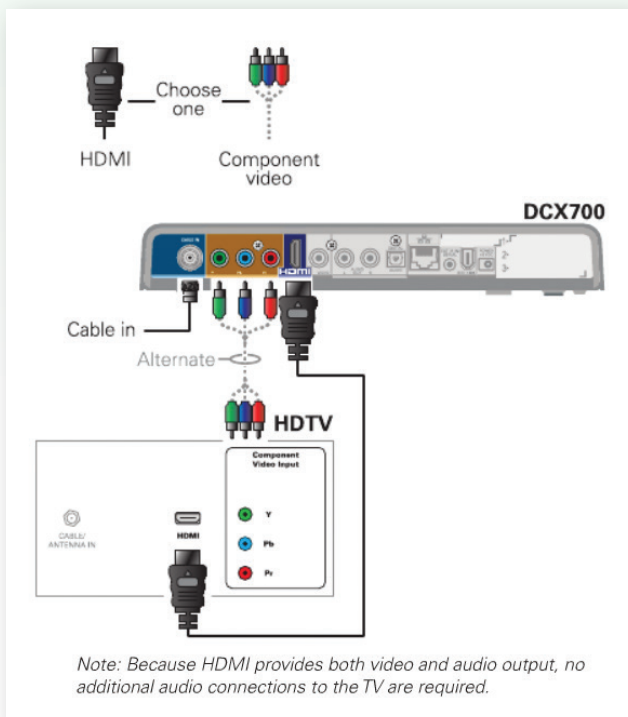

Please follow these steps:

1. Connect the coaxial cable from your cable wall outlet to the "cable in" port on the back of the set-top box, making sure that the connections are tight.
2. Connect your HDMI (or component cables) to the HDMI port on the back of the set-top box and the HDMI port on your TV.
3. Connect the power cord to the set-top box and your electrical wall outlet.
4. Turn on your TV and select the appropriate video input (HDMI or other input should match the port you used on your TV). For example HDMI 1 or HDMI 2.

Basic Navigation Tips




In i-Guide, **BLUE** is the highlight color. To navigate the guide, use the arrows on your remote control. The highlight appears on-screen to indicate your current selection.

Press ◀ ▶ ▲ ▼ buttons on your remote to move the highlight.

Press **OK/SELECT** to confirm your selection.

Press **EXIT** on your remote to return to watching TV.

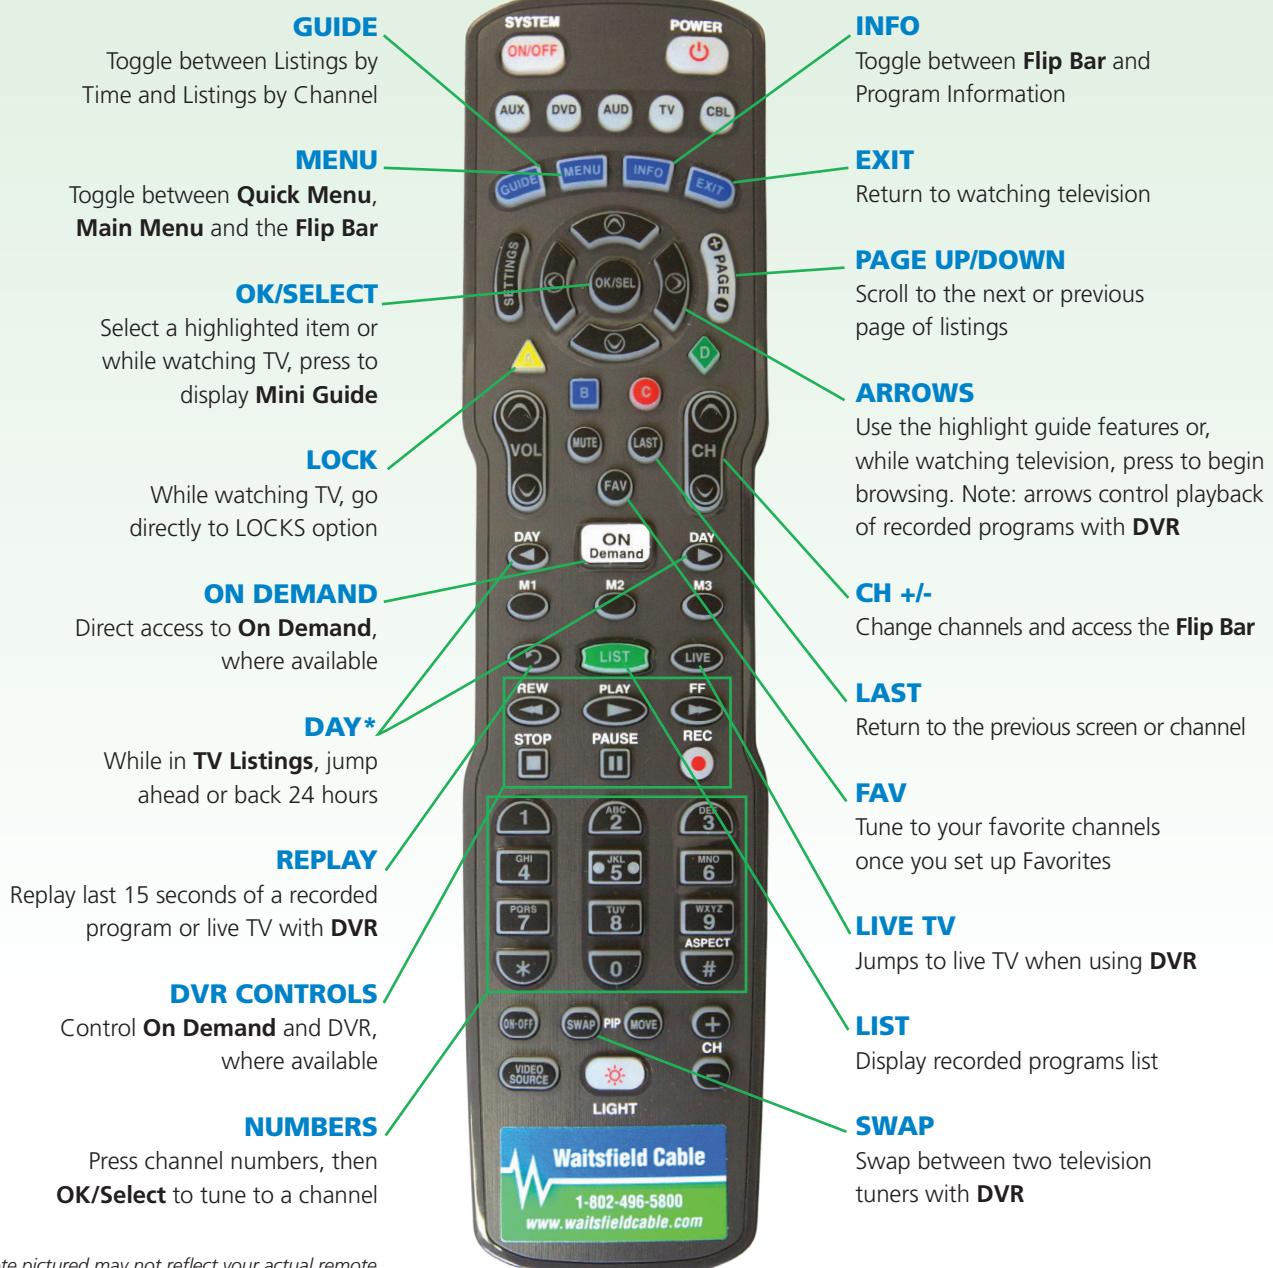

Note: Remote pictured may not reflect your actual remote. Basic functions should be the same.

*Amount of programming data varies by system.