

# Basic Navigation Tips




In i-Guide, **BLUE** is the highlight color. To navigate the guide, use the arrows on your remote control. The highlight appears on-screen to indicate your current selection.

Press ◀ ▶ ▲ ▼ buttons on your remote to move the highlight.

Press **OK/SELECT** to confirm your selection.

Press **EXIT** on your remote to return to watching TV.

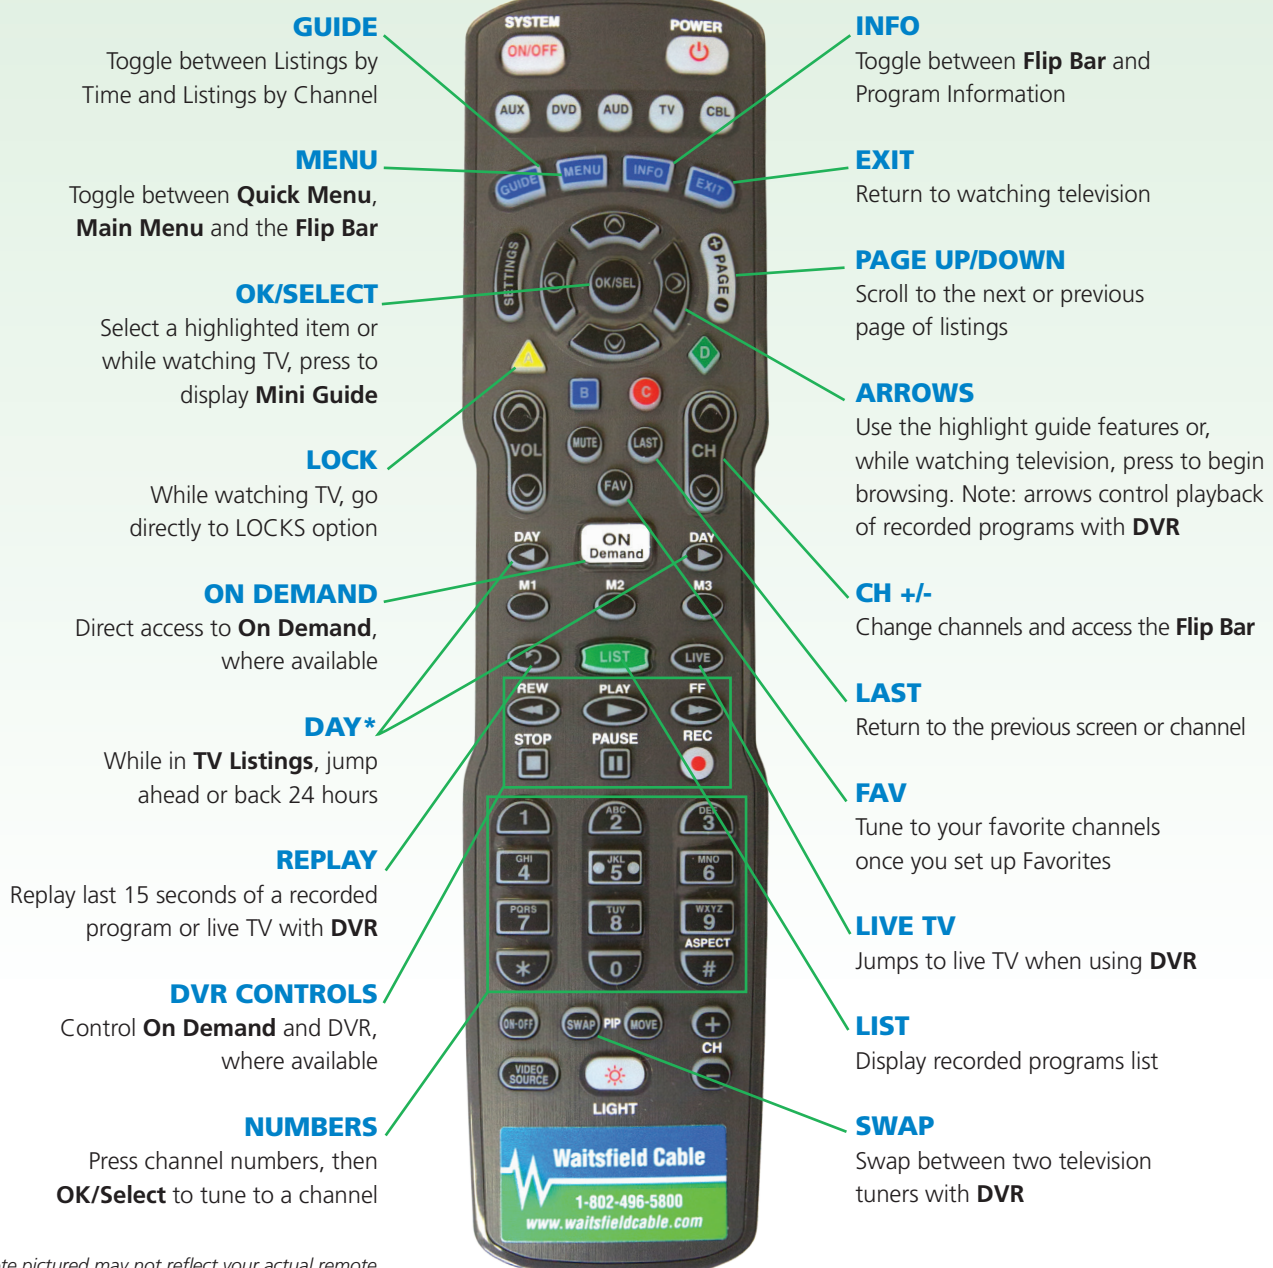

*Note: Remote pictured may not reflect your actual remote. Basic functions should be the same.*

*\*Amount of programming data varies by system.*