

 
Parental Controls

i-Guide provides a Parental Controls feature, which lets you to restrict viewing and purchases of TV programs and services based on your preferences. To activate Parental Controls, you must set a personalized four-digit PIN. Then you can configure locks by movie ratings, TV and content ratings, channels, or titles. You can also hide adult titles from being displayed on-screen.

Parental Controls Setup

You can quickly set locks at any time while watching TV or using the guide. Use any of the following methods to set locks.

- Press the **LOCK** button on your remote (Not supported on all remotes)
- Select the from the Quick Menu
- Select the from any program info screen to lock a specific program
- From the Main Menu or Setup menu, access Parental Controls to configure locks

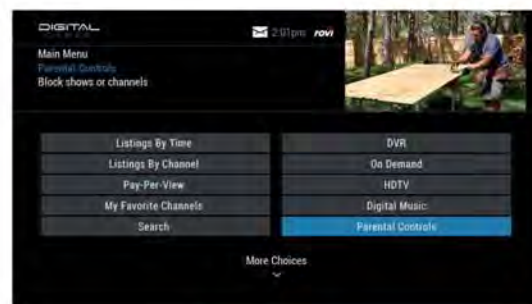

Main Menu

 


Quick Menu



Program Info

With any of these actions, if you have not set up a PIN, you are prompted to enter a four-digit PIN to activate the Locks feature. If you have already set up a PIN, enter your number.

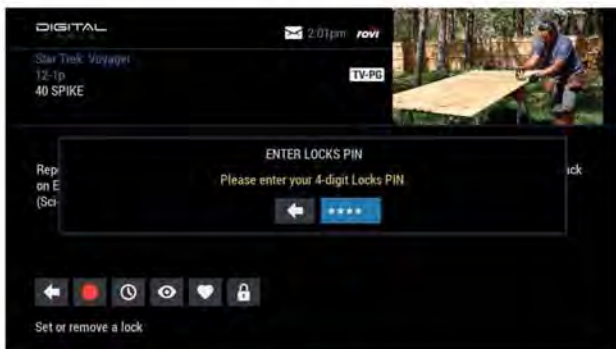

PIN Setup

 


Lock Options


Locking by Ratings and Content

The Parental Controls feature lets you lock programs and movies by ratings and content.

From the Parental Controls option on the Main Menu, you can filter your by Movie Rating, TV Rating, TV Content, Channel, Title, or Service.

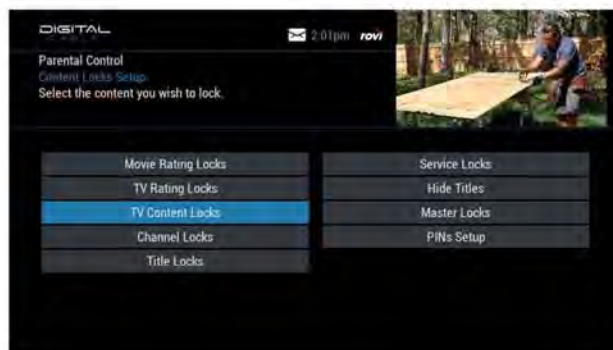

 In the TV Content category, you can lock the level of explicit content based on your viewing preferences for violence, language, sexual situations, and suggestive dialog.

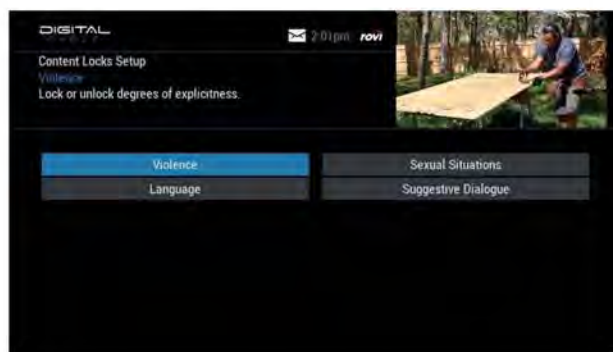


In the Movie Ratings or TV Ratings categories, you can block content by rating. Once you lock content by a specific rating, the guide automatically locks that rating and every rating that is more restrictive. For example, when you lock content by the PG-13 rating, movies with R, NC-17, and Adult ratings are also locked.



MOVIE RATINGS	TV RATINGS	TV CONTENT RATINGS			
		Violence (FV, V)	Language (L)	Sexual Situations (S)	Suggestive Dialogue (D)
G	TV-Y				
PG	TV-Y7	Fantasy Violence			
PG-13	G				
R	TV-PG	Moderate Violence	Infrequent Coarse	Some Sexual Situations	Some Suggestive Dialogue
NC-17	TV-14	Intense Violence	Strong Coarse	Intense Sexual Situations	Intensely Suggestive Dialogue
Adult	TV-MA	Graphic Violence	Crude Indecent	Explicit Sexual Activity	


Parental Controls for On Demand

 The settings for Parental Controls also affect On Demand programming. To block all access to On Demand programming, select Service Locks from the Parental Controls menu.

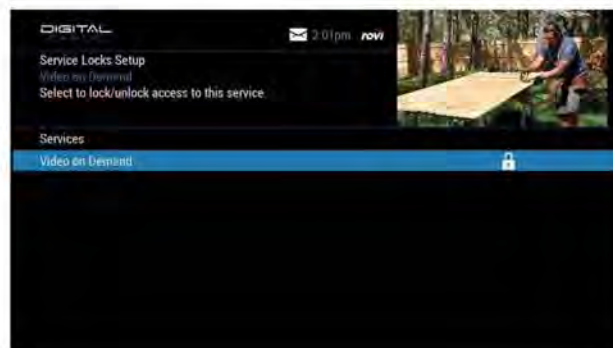


View Locked Programs

 To view programs and channels you have locked, enter your PIN when prompted. Locks are automatically restored when you tune away from the channel or turn your set-top box off.

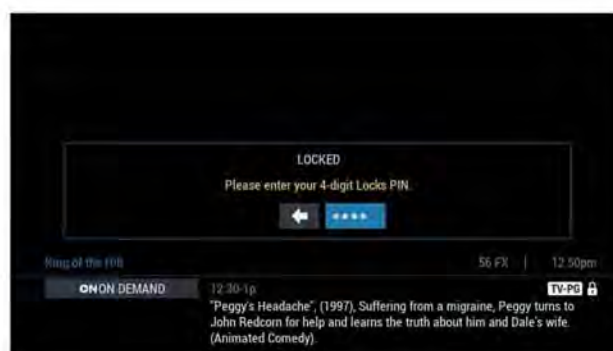

Bypassing or Clearing Locks

 For unrestricted viewing, you can temporarily open or clear all locks. To temporarily clear configured parental locks, select Parental Controls Setup from the Main Menu, Select Master Locks, and change either option from No to Yes.

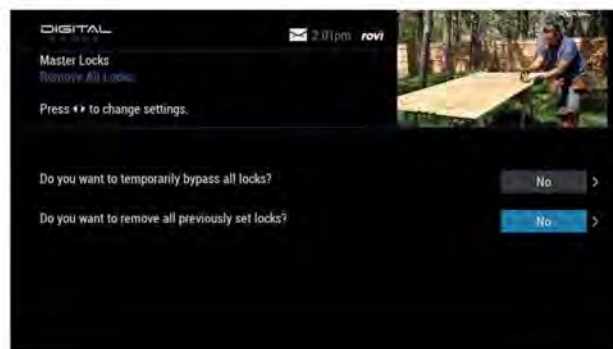

Restoring Locks

You can restore locks in any of the following ways:

- While watching TV, press the **LOCK** button any time and then enter your PIN.
- From the Setup menu, select Parental Controls Setup. Using the Master Locks option, change the settings from Yes to No to restore all configured locks.
- Turn the cable box off and back on.