

# Quick Start Guide:

## Setting up your BLAST u4m


1

Connect BLAST u4m to power outlet.



2

When the LED is flashing red, you can pair the BLAST u4m with the BLAST u4. Press and hold the WPS buttons on the BLAST u4m and then the BLAST u4 for 3 seconds each (less than 30 seconds apart). The LED flash green while attempting to pair.

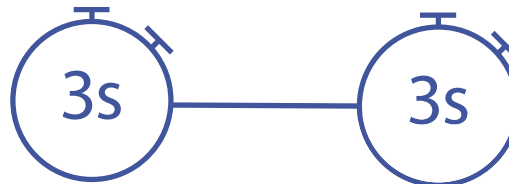


3

Use the solid green LED indicator (displays for 60 seconds at end of pairing cycle) to determine ideal location for the GigaMesh. If necessary, relocate it to a more ideal distance from the BLAST and confirm successful pairing after the GigaMesh reboots (repeating steps 2-3 as needed).

**Note:** Once successful pairing is complete, the BLAST and GigaMesh LEDs will both show a solid cyan (light blue) colour. It may take several minutes to reach this state.

BLAST u4m location is ideal distance from the BLAST u4.

Ideal: Steady State

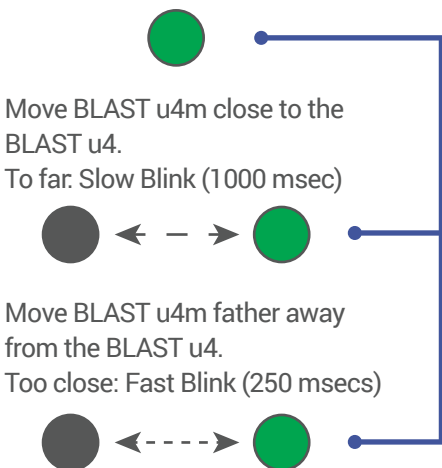

4

If applicable, use the CommandIQ app to set up the BLAST. See the CommandIQ Quick Start Guide for guidance.

### Need help?

If you need assistance at any time, please call us at 1-888-321-0815 or email [support@gmavt.net](mailto:support@gmavt.net).